 




# KOSS®

## DVD PLAYER

MODEL NO.: KS5509-2

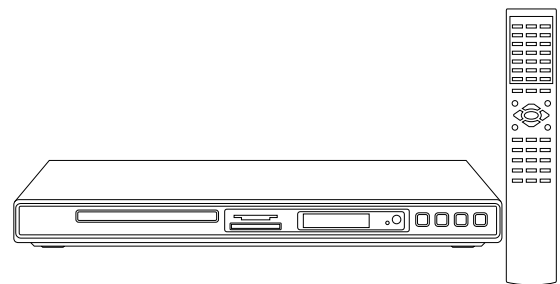

### Instruction Manual

#### Maintenance and Care

##### Caring for the player

- The apparatus shall not be exposed to dripping or splashing\* and that no objects filled with liquid shall be placed on the unit.
- Electronic products of this kind should never be subjected to extreme temperatures or high humidity. For instance, this set should not be placed in bathing areas or around stoves and radiators.
- If anything falls into the cabinet, unplug the unit and have it checked by qualified personnel before operating it any further.

##### Cleaning the Unit

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- The finish on your unit may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.
- Mild soap and a damp cloth may be used on the front panel.

##### Inclination

- Do not install the unit in an inclined position. It is designed to be operated in a horizontal position only.

##### Condensation

- If the unit is brought directly from a cold to a warm location, moisture may condense inside the DVD player and cause damage to the lenses. When you first install the unit, or when you move it from a cold to a warm location, wait for 30 minutes before operating the unit.

##### Avoid Interference

- Depending on the reception condition of the TV, interference may appear on the TV screen while you watch a TV broadcast and the unit is left on. This is not a malfunction of the unit or the TV. To watch a TV broadcast, turn off the unit.

##### Disconnect Power

- If you are not going to use the player for a long time, be sure to disconnect the player from the wall outlet. To disconnect the AC power cord (main leads), grasp the plug itself, never pull the cord.
- The mains plug is used as the disconnect device, the disconnect device shall remain readily operable.

 
##### Disc Maintenance

- Before playback, wipe the disc from the center hole toward the outer edge with a clean cloth.
- Never use benzene, thinner, cleaning fluid, static electricity prevention liquids or any other solvent.




#### Location of Features

##### Front Panel Controls

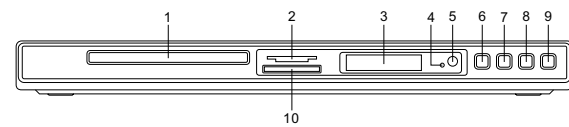

- Disc Tray
  - Card Slot
  - Display
  - STANDBY Indicator
  - REMOTE SENSOR
  - OPEN/CLOSE Button
  - PLAY Button
  - SELECT Button
  - STANDBY/STOP Button
  - Card Slot
- Accepts cards: Only Multi-Media Card (MMC); Secure Digital (SD); Memory Stick (MS); Memory Stick Pro (MSPro); or Smart Media (SM).
- Lights when the system is in standby (off) mode or operating (on) mode.
- Receives the commands from the remote control.
- Opens and closes disc tray.
- Begins disc play.
- Switches between memory card slot 1, slot 2 and disc tray.
- Turns the DVD player on and off. Stop playback.
- Accepts cards: Compact Flash (CF) Type I; or Compact Flash (CF) Type II.

##### Rear Panel Jacks

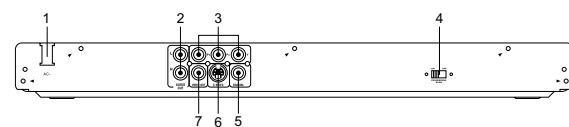 



- AC Power Cord
- AUDIO Left/Right Output
- Component Video Outputs
- PROGRESSIVE SCAN ON/OFF Switch
- COAXIAL Digital Audio Output
- S-VIDEO Output
- VIDEO Output

##### Display

  - VCD/CD Indicator
- DVD Indicator
- PLAY Indicator
- Disc Playing Indicator
- Chapter Track Indicator
- Repeat Indicator
- DOLBY DIGITAL Indicator
- Playtime Indicator
- PBC Indicator
- PAUSE Indicator
- MP3 Indicator

##### Remote Control Unit


- KEY LOCK Button
- NUMBER 0 TO +9 Button
- DVD MENU Button
- AUDIO MODE Button
- TITLE MENU Button
- SUBTITLE MENU Button
- PBC Button
- 3D Button
- DISPLAY Button
- Navigation (Left/Right/Up/Down) Buttons
- RETURN Button
- BOOKMARK Button
- STOP Button
- SLOW/R Button
- PAUSE/STEP Button
- RANDOM Button
- MUTE Button
- REPEAT Button
- REPEAT/A-B Button
- SEARCH REV ◀ / FWD ▶ Button
- SKIP REV ◀◀ / FWD ▶▶ Button
- SLOW/F Button
- PROGRAM Button
- SEARCH Button
- ENTER Button
- PLAY Button
- SETUP Button
- ANGLE Button
- AUDIO MENU Button
- ZOOM Button
- CLEAR Button
- DIGEST Button
- STANDBY ON/OFF Button
- OPEN/CLOSE Button

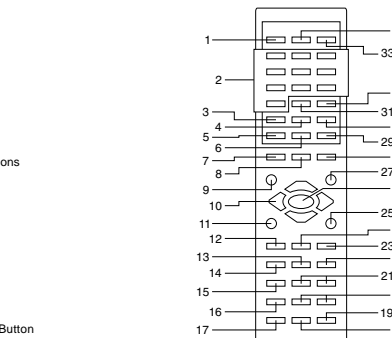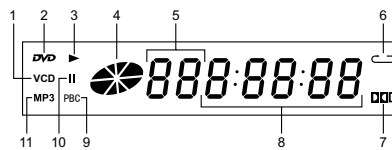


Note: Point remote control unit no more than 6m from the remote sensor and within about 45° of the front of the unit.

#### Battery Installation

 - Remove the battery cover.
  - Insert two battery (AA, R6, UM-3 types) making sure the polarity (+/-) matches the marks inside the unit.
  - Replace the cover
- Do not attempt to recharge, short-circuit, disassemble, heat or throw the batteries into the fire.
  - Do not mix different types of batteries or old and new batteries.

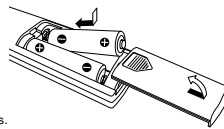

#### Basic Connection (DVD Player + TV + Video Recorder)

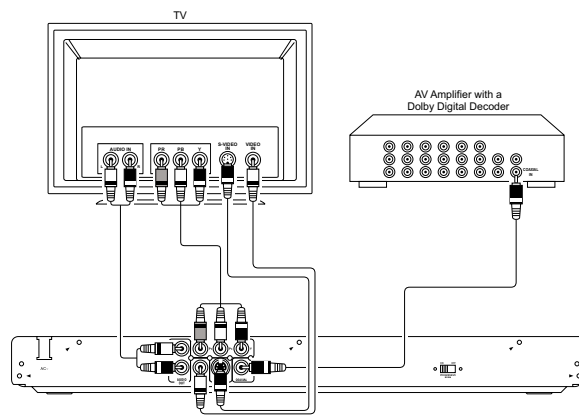 

Note: Whenever you are connecting your system cables, turn off the power and make certain that the power cord has been removed from the wall outlet.

Use Audio Cable (Red/White), Video Cable (Yellow) to connect the DVD player and your TV.

- Connect the audio cables to the AUDIO OUT L and R jacks on the back of your DVD player and to the corresponding AUDIO INPUT jacks on your TV.
  - Connect the Video cable
- Basic connection — Connect the video cable to the VIDEO OUT jack on the back of your DVD player, and to the VIDEO INPUT jack on your TV.
  - S-VIDEO — If your TV set has an S-Video jack, connect the S-Video cable to the S-Video jack on the DVD to the S-Video of your TV.

#### Digital Out Coaxial (Audio)

Use one of these jacks to connect your DVD player to a Dolby Digital receiver or decoder. Some receivers have either the COAXIAL type of Digital Audio Input jack and some have both. Under most conditions, coaxial connectors work equally well—the only difference is the type of cable you connect to the jack.

#### Component (Y, PB, PR) Video Out

Use these jacks to connect to a TV with progressive video input jacks and then set the PROGRESSIVE SCAN switch to 'ON'. Progressive Scan is a video scanning system that displays all lines in a frame in one pass, as opposed to the traditional system, interlaced scan. This connection provides optimum quality. To ensure maximum picture quality use three video-grade cables for connections. Note that it is essential to match the color-coded connectors with a compatible TV.

#### 525 Line Digital Progressive-Scan Component Video Output

Compared to standard interlaced video, progressive scan effectively doubles the amount of video information fed to your TV or monitor. The result is a stable, flicker-free image. (Check your TV/monitor for compatibility with this feature.) For the highest picture quality, try watching a DVD movie on a Progressive Scan compatible TV.

- If you connect a TV that is not compatible with a progressive scan signal and set the PROGRESSIVE SCAN switch to the ON position, you will not be able to see any picture at all. To regain the picture, you must shut the unit off and set the PROGRESSIVE SCAN switch to the OFF position. Then, turn the unit on and the picture will appear.
- Consumers should note that not all high definition television sets are fully compatible with this product and may cause artifacts to be displayed in the picture. In case of 525 progressive scan picture problems, it is recommended that the user set the PROGRESSIVE SCAN switch to 'OFF'.

#### About WMA

WMA is the abbreviation of Windows Media Audio and refers to an audio compression technology developed by Microsoft Corporation. WMA data can be encoded by using Windows Media Player version 8 or Windows Media Player for Windows XP. Files are recognized by their file extension ".wma" or ".WMA". Windows Media, and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

- This unit will play CD-ROM, CD-R and CD-RW discs containing files saved in the MP3 or WMA format with a sampling rate of 32, 44.1 or 48 KHz.
- Fixed bit-rate MP3 files are recommended, or the playing time may not be shown correctly.
- This player is not compatible with no loss encoding or variable bit-rate (VBR) WMA files.
- WMA files encoded with DRM (Digital Rights Management) copy protection will not play.

- When naming MP3 and WMA files, add corresponding file name extension (.mp3 or .wma). Files are played according to the file extension. To prevent noise and malfunctions, do not use these extensions for other kinds of files.
- This player can recognize up to 999 files (WMA/MP3) and up to 499 folders. If a disc exceeds these limits, only files and folders up to these limits will be playable. Files and folders are read/displayed in alphabetical order.
- Folder and track names (excluding the file extension) are displayed.
- This player cannot 100% playing all kinds of WMA/MP3/JPEG file disc because the unit's play ability depends on the quality of the disc, bit-rate, and file structure.

#### About MPEG4 and DivX

MPEG is the abbreviation of the Moving Picture Experts Group which belongs to the family of ISO/IEC standards (International Organization for Standardization and International Electrotechnical Commission). MPEG-4 is a compression technology for Interactive Multimedia System. DivX is a brand-name video codec (compression-decompression) technology code based on the MPEG-4 standard that compresses video to small enough sizes that it can be easily sent over the Internet, but retains a high degree of video quality.

- This player is DivX 4 and DivX 5 compatible, which support up to home theatre profile with maximum peak bit-rate = 10000 Kbps. The video resolution can support up to the maximum of 720 x 480 @ 30fps and 720 x 576 @ 25fps.
- This player supports the bitstreams that encoded in ISO MPEG-4 compliant. The visual profile can support from Simple Profile (SP) level 0 to level 3 and Advanced Simple Profile (ASP) level 0 to level 5, with maximum bit-rate = 8000 Kbps.

#### Notes:

- There are many non-standardised DVD/MPEG-4/DivX/MP3/WMA/CD-recording procedures and copy protection procedures now in use, and many different kinds of DVD+R, DVD+RW, CD-R and CD-RW blank disks. Therefore in some cases read errors or read delays may be encountered. This is not a defect of the device.
- This player does not responsible for play ability of MP3 in any case. Due to recording condition such as PC performance, writing software, media ability or etc.
- For CD-RW or CD-R, it may not be played according to the type of this disc.

#### Card Reader Operations

The Card reading formats for Slot playback are MP3, WMA, JPEG and MPEG-4. When using a memory card, the file name must be seven characters in order to be displayed, unlike the file name of a disc.

- Insert a compatible memory card (types described above) into Slot 1 or Slot 2.
- Press the SELECT button to choose card 1, press again to choose card 2 and a third time to choose disc tray. Repeatedly pressing the SELECT button switches between the card 1, card 2 and the disc tray.
- Use the Navigation (Left/Right/Up/Down) buttons to move up, down, left or right through the folders, press ENTER to select the highlighted folder or item.
- Press PLAY to begin playback.
- Press STOP to stop playback.
- To remove the information from the screen, repeatedly press the SELECT button or remove the cards.

#### Basic Operation

##### Starting Playback

- Plug the AC power cord into your AC power outlet at home. The STANDBY indicator turns on. The unit is connected to the main power.
- If the unit is on stand by mode. Press the STANDBY ON/OFF button of the remote handset or the main unit to turn on the player.
- Press and hold the STANDBY button for a few seconds, and the unit will turn on.
- Press the OPEN/CLOSE button to open the disc tray ('Open' appears on display and TV screen) and place the disc with the label side facing up on the disc tray.
- Hold the disc without touching either of its surfaces, position it with the printed title side facing up, align it with the guides, and place it in its proper position.
- Press the OPEN/CLOSE button. The disc tray closes ('Load' appears on display and 'Loading' appears on TV screen), and play start automatically.

##### If a MENU appears on the TV screen:

- Press the Left/Right/Up/Down or Enter button, to select the desired item, then press the ENTER button. Playback of the selected item will start.
- Note: For more details, please refer to the jacket or case of the disc.
- Stopping Play
- Press the STOP button once and "Press Play Key To Continue" and " ■ " appear on the screen. The player memories the point where you stopped. If you press the PLAY button again, play starts automatically from the point where you stopped. (Resuming Playback) If the STOP button is pressed twice, the screen only shows " ■ ", then the player stops completely.
- Note: Some discs may not start resuming playback.

##### Key Lock

This feature allows you to lock all the controls on the front panel of the main unit to prevent others, especially children, from operating the unit without the remote handset. To activate the Key Lock feature press the KEY LOCK button on the remote control. The "KEY LOCK ON" statement will appear on the TV screen and all front panel controls, including the Power button will be locked. To unlock the front panel controls press the KEY LOCK button on the remote control again. The "KEY LOCK OFF" statement will appear on the TV screen to indicate the unlock action.

##### Skip and Searching

- SKIP BACK ◀ / NEXT ▶ button: Press these buttons to go to the previous/next chapter (DVD) or track (CD).
  - SLOW/F / SLOW/R button: Press this button to select slow-motion forward or rewind playback at 1/2, 1/4, 1/8, 1/16 normal speed without sound.
  - Press the PLAY button to resume normal playback.
- Note: This player does not support slow-motion rewind (SLOW/R) playback and " ■ " will appear on the TV screen if you press SLOW/R button when playing a VCD disc.

- PAUSE/STEP button: Press the PAUSE/STEP button once to pause the picture. Repeatedly press the PAUSE/STEP button to play the DVD one frame at a time.
- Press the PLAY button to resume normal playback.
- SEARCH REV ◀◀ and FWD ▶▶ button: These buttons allow searching ahead/back at 4-level speeds as 2x, 4x, 8x, and 16x.
- Press the PLAY button to return to normal playback.

#### Title/Chapter Search

Press the SEARCH button once, then press the Navigation button (Left/Right) to select Title/Chapter and press the Number buttons to select title number and chapter number respectively.

#### Title Time/Chapter Time Search

Press the SEARCH button twice and press Number buttons to select title time (Hour: Minute: Second). Press the SEARCH button the third time and repeat the above mentioned procedure for chapter time.

#### Notes:

- If the Search feature is attempted in the Play mode, then you can only go to a specific chapter or time, you cannot change the title number.
- If you enter a time that exceeds the time limit of the DVD, then "INPUT INVALID" will appear, and you must try again.
- Title search may not work properly with some discs.

#### Playback Mode

##### Repeat Playback Mode Buttons

The repeat functions that you can enjoy are dependent on the disc types played.

DVD: Chapter repeat, title repeat and given portion repeat.

CD: All tracks repeat, single track repeat and given portion.

DivX: One track repeat, all tracks repeat.

##### REPEAT button:

- You can repeatedly play a title (DVD) or all tracks (VCD/CD) when " ◀ Title " or " ◀ All " appears on TV screen respectively.
- You can repeatedly play a chapter (DVD) or a single tracks (SVCD / VCD / CD) when " ◀ Chapter " or " ◀ Track " appears on TV screen respectively.
- You can cancel repeat functions when " ◀ Off " appears on TV screen.

##### REPEAT-A-B button:

- You can repeatedly play a given portion by operating as following:
  - To press this button once to define the portion head. To press this button again to define the portion toe. And then the portion will be played repeatedly.
  - To press this button again to return to normal playback.
- Note: MPEG4, WMA & MP3 discs does not support this function.

##### Program Playback

This unit has a 20 track programmable memory that allows you to program up to 20 tracks on any disc for playback in any desired order. You may program 20 different tracks or you may also program certain tracks to play more than once. Programmed Playback only work for CD's, it does not work on MP3 CD's. To perform programmed playback, proceed as follows:

- While in the Stop mode, press the PROGRAM button, the Program menu will appear on the TV screen.
- Press the Number buttons to input 2 numbers for each program track: one for title, one for chapter. After input 2 numbers, the cursor will automatically jump to the next program track for input another numbers.
- Repeat step 2 until all desired title & chapters have been programmed (up to 20). You can repeat a title & chapter more than once if desired.
- Press the Navigation (Left/Right/Up/Down) button to select "START" position.
- Press the PLAY (▶) button to begin programmed playback. Playback will begin on the first title/chapter that you programmed and the player will continue to play all of the tracks that you programmed in the order in which you programmed them.
- To cancel the Program function, press the STOP (■) button twice, or press the OPEN/CLOSE button.

##### For VCD/CD

Select the track to be memory by using the Number buttons. The unit will automatically go to the next track to allow you to program.

##### For DVD

Select the TITLE/CHAPTER to be memory by using the number buttons. The unit will automatically go to the next track to allow you to program. Press the STOP (■) button to stop programmed play.

Note: DivX, WMA & MP3 discs does not support this function.

##### Random Playback

All the tracks are played in a random order. (Chosen by the DVD player)

- Insert a disc.
- In stop mode, press the RANDOM button (Random appears).
- Press the PLAY button to start random playback. Once all the tracks on the current disc have been randomly played, the player automatically stops playback.
- Press the RANDOM button again to stop playback (Random disappear).

##### Interactive Function Buttons (DVD)

- AUDIO button: You can change the audio language from the one selected at the initial settings to a different language, if available.
- SUBTITLE button: You can select a subtitle language, and to turn the subtitle menu on/off.
- DVD MENU button: Press this button. The Main Menu of the disc will appear. Use the Navigation (Left/Right/Up/Down) button to select the desired option, and then press the ENTER button.
- TITLE button: Press this button. The Title Menu of the disc will appear. Use the Navigation (Left/Right/Up/Down) button to select the desired option, and then press the ENTER button.



### Audio Mode (Audio CDs only)

While playing an audio CD (not DVD), you can cycle between the audio modes as follows: Press the AUDIO MODE button to cycle through the audio modes. The audio modes vary depending on the disc inserted, but include MONO LEFT, MONO RIGHT, MIX MONO, STEREO, etc. "DISC NOT SUPPORT" will appear if the disc does not support audio mode changing.

**Note:** DivX disc does not support this function. WMA and MP3 discs support this function.

### Zoom

Press this button (Zoom 2x, 3x, 4x) during normal, slow or still playback mode. This player can magnify a picture and use direction buttons (←, ↑, →, ↓) to select desired part of the zoomed picture.

### Notes:

- For JPEG files, press ZOOM and then REV or FWD until you reach the zoom size you require. Press ZOOM again to quit the zoom function.
- DivX disc support this function. WMA and MP3 discs does not support this function.

### Angle

#### Viewing from a desired camera angle (Multi-Angle) [DVD]

Some DVD discs may contain scenes which have been shot simultaneously from a number of different camera angles. The jacket or case of discs that are recorded with angle will be marked.

**Note:** The recorded angles differ depending on the disc used.

- Play the disc that is recorded with angles.
- Press the ANGLE button (ANGLE) : [1/3] " appears on the screen.
- Press the ANGLE button again to choose the desired angle, TV screen will change within one or two seconds.

### 3D Sound

3D audio post-processing will give a multi-channel effect when using only 2 speakers. This only works with discs encoded with Dolby, Pro Logic, Dolby Digital audio tracks.

- Press the 3D button repeatedly to achieve the highest quality sound. For Disc playback the following surround effects will appear on the TV screen when you press the 3D button repeatedly: SURROUND ROCK, SURROUND POP, SURROUND LIVE, SURROUND DANCE, SURROUND TECHNO, SURROUND CLASSIC, SURROUND SOFT, SURROUND OFF

- DO NOT USE the feature if connecting to more than two speakers or if using coaxial or optical digital output to acquire digital audio sound. Turn off the TV surround sound and other surround sound effects when using this surround effect.

### Mute

Press the MUTE button once to mute the sound, "MUTE" will appear on the TV screen, press the MUTE button again to restore the sound.

### Storing Bookmarks in the Memory to be Viewed

Storing a bookmark in the memory is similar to marking your page in a book. You can quickly go to any point on the disc.

**Note:** Some discs may not work Bookmark function. Storing, playing, and clearing a bookmark in the memory, up to 12 points can be memorized for each disc.

- Press the BOOKMARK button during play appear on the screen.
- Press the PLAY button to choose start marking.
- Press the Navigation button (←) to go to the new bookmark place.
- Press the BOOKMARK button to leave Bookmark section.
- Press the Skip (⏮) or Search (⏪) buttons to go to desired Title/Chapter section.
- Press the BOOKMARK button to enter Bookmark section.
- Repeat step 2 to 6 to program Bookmark.
- Press the Navigation buttons (←) to go to your desired Bookmark position.
- Press the PLAY button to choose start Bookmark play. The playtime will display on screen.
- Repeat step 8 to 9 to play Bookmark.
- Press the CLEAR button to clear the old bookmark marking.
- Exit the Bookmark section by pressing the Bookmark button.

**Note:** DivX, WMA & MP3 discs does not support this function.

### Display button (OSD)

The display appears across the top of the screen when you press the DISPLAY button on the remote while playing a disc. Press the DISPLAY button repeatedly to scroll through playback information.

## MP3/WMA Basic Operations

### Playback of MP3/WMA CD

- Press the STANDBY button to turn on the unit. If turned on with the remote control, the STANDBY indicator will go out.
- Press the OPEN/CLOSE button to open the disc tray. Insert an MP3 disc with the label side facing up on the disc tray.
- Press the OPEN/CLOSE button to close the disc tray. "Loading" will appear on the TV screen. If your MP3 disc contains more than 99 music tracks, the 2 orange digits on the player display that shows the disc total tracks will flash continuously to indicate the hundredth digit.
- After loading, the Folder/Track Menu will appear on the TV screen. Press the Navigation (←, →) buttons to select your desired track.
- Press the ENTER button to confirm to play the track.
- Press the STOP (■) button to stop playback.

### Selecting a Folder Menu

Press the Navigation (←) button when stop mode, then press the ENTER button. FOLDER MENU will appear, press the Navigation (←, →) buttons to select the desired folder, then press the ENTER button to choose the folder.

### Return

Press the RETURN button to quickly go back to the menu page only when VCD version 2.0 disc is playing and PBC function is ON.

### Digest (DVD and VCD)

Two digest types can be summarized from "Select Digest Type" Menu:

- Track Digest: Choose your track starting picture by inputting number buttons and press enter to confirm.
- Disc Internal: Choose your 10 minute start-picture track by inputting number buttons and press enter to confirm.

### Digest (CD)

Start the 6 second CD Scan function by pressing the DIGEST button when playing a CD.

**Note:** MPEG4 disc does not support this function.

### Clear

 
Press the CLEAR button to erase a wrong input number.

### Playback Control (PBC)

- The Playback Control feature is available only on Video CDs. Press the DVD MENU button to turn the PBC feature on and off. The Playback Control feature supports the menus of the VCD format similar to a DVD menu.
- When playing VCD with PBC function, you can enjoy simple interactive software on TV screen.
- When playback, there are such functions as track selection, stop, previous/next scene, fast forward/backward, return, play/pause for you to select.
- PBC functions can be auto run after the disc is loaded.
- Desired tracks can be selected by pressing numeric buttons when PBC functions are on. After selected, press ENTER, player will start playing the desired track.

## Using the Setup Menus

Press the SETUP button to display the player's main menu.

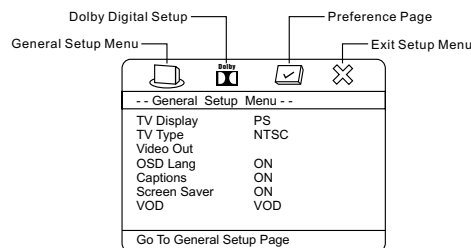

The setup menu lets you customize the DVD player by allowing you to select various language preferences and screen saver on/off, adjust what type of TV screen you have and more. Enter the Setup Menu by pressing SETUP button.

Use the Navigation (←, →, ▲, ▼) buttons to navigate through the menus/screens and press the ENTER button to select the highlighted option. To exit the Setup Menu, press the SETUP button.

## General Setup Menu

### TV Display

- Normal/PS: "PS" stand for "Pan Scan" This is selected when the unit is connected with a normal TV. Wide-Screen images are shown on the screen, but with some parts cut automatically.
- Normal/LB: "LB" stand for "Letter Box" This is selected when the unit is connected with a normal TV. Wide-screen images are shown on the screen, with black belt on the top and bottom.
- Wide Screen: This is selected when the unit is connected with a wide - screen TV.

### TV Type

You may select according to the color system of the TV to be connected.

- Select "NTSC" for a NTSC TV.
- Select "PAL" for a PAL TV.

### Video Out

Select the color video type and switch mode to fit your connector type:

S-Video: Select when using S-Video Output if your TV has S-Video connector to provide better picture quality.

YUV: Select when using Component Video Outputs.

### OSD Lang

- English: The OSD is in ENGLISH.
- Spanish: The OSD is in SPANISH.
- German: The OSD is in GERMAN.
- French: The OSD is in FRENCH.

### Captions (OPTIONAL)

Select this option when some newer DVD movies include closed captioning for hearing impaired viewers.

- Select "ON" to switch on the captioning feature that describes other sounds being heard together with the dialog.

### Screen Saver

Start the screen saver, the screen saver image appears when the unit stops or the image is motionless for approximately 1 minute. This saver can keep the screen from being damaged.

- ON: Start the screen saver.
- OFF: Remove the screen saver.

 
### VOD

VOD files are downloaded after paying a rental from certain commercial websites. Prior to downloading a VOD you need to input the registration number of your DVD player on the purchase form on the site. Follow the instructions below to find the registration number of your player: press the SETUP button. Select the VOD option from the General Setup Menu and press OK. Write down this VOD 8-character registration number so that you can fill in the form on the website you purchase your VOD files from.

**Note:** If you cannot play a VOD file recorded on a CD-R disc after downloading it, the rental period allocated during purchasing from the website may have expired. It is also possible that the recorded file is not compatible with your player because of different versions or incorrect download parameters. The parameters used when copying to CD-R may be another reason for this. Since it is not possible here to supply all the information, parameters and advice relating to the use of VOD files.

## Dolby Digital Setup

The setting structure is:

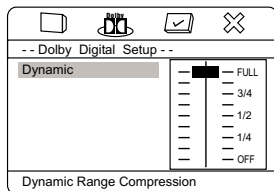


### Dynamic

Select your desired Dynamic Range Compression Rate (DRC) to adjust linear compression results of the signals.

- Select Dolby and press (←, →) Navigation arrow button to enter Dynamic setting mode.
- Press (→) Navigation arrow button to highlight the DRC level indicator.
- Press (←, →) Navigation buttons to select your DRC rate level.
- Press Enter to confirm your selection.
- Press Setup to exit the Setup menu.

## Preferences Setup

 You must stop playback to enter preferences mode.

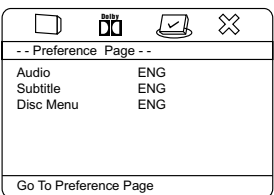

The setting structure is: - - Preference Page - -

- Audio: English, French, Spanish, German, Japanese
- Subtitle: English, French, Spanish, German, Japanese, Off
- Disc Menu: English, French, Spanish, German, Japanese

### Select Languages and Menus

If a language of unit mentioned above is recorded on the disc, you can select sounds, subtitles, or disc menu languages of player. If not the language recorded on the disc is shown.

## Troubleshooting

Before requesting service for this player, check the chart below for a possible cause of the problem you are experiencing. Some simple checks or a adjustment on your part may eliminate the problem and restore proper operation.

Symptom (Common)	Remedy
No power	<ul style="list-style-type: none"> <li>Insert the AC power plug securely into the power outlet.</li> </ul>
Play fails to start even when PLAY is pressed. Play starts but then stops immediately.	<ul style="list-style-type: none"> <li>Condensation has formed: wait about 1 to 2 hours to allow the player to dry out.</li> <li>This player cannot play a disc other than DVD, Video CD and CD.</li> <li>The disc may be dirty and may require cleaning.</li> <li>Ensure that the disc is installed with the label side up.</li> </ul>
No picture	<ul style="list-style-type: none"> <li>Ensure that the equipment is connected properly.</li> <li>Ensure that the input setting for the TV is "Video".</li> </ul>
No sound Distorted sound.	<ul style="list-style-type: none"> <li>Ensure that the equipment is connected properly.</li> <li>Ensure that the input setting for the TV and stereo system are correct.</li> </ul>
Picture is distorted during rapid advance or rapid reverse.	<ul style="list-style-type: none"> <li>The picture will be somewhat distorted at times: this is normal.</li> </ul>
No rapid advance (or rapid reverse play).	<ul style="list-style-type: none"> <li>Some discs may have sections which prohibit rapid advance (or rapid reverse.)</li> </ul>
No 4:3 (16:9) picture.	<ul style="list-style-type: none"> <li>Choose the correct setup "TV SCREEN" item which matches the TV set used.</li> </ul>
No operations can be performed with the remote control unit.	<ul style="list-style-type: none"> <li>Check the batteries are installed with the correct polarities (+ and -).</li> <li>The batteries are exhausted: replace them with new ones.</li> <li>Point the remote control unit at the remote control sensor and operate.</li> <li>Operate the remote control unit at a distance of not more than 6m from the remote control sensor.</li> <li>Remove the obstacles between the remote control unit and remote control sensor.</li> </ul>
No key operation (by the main unit and/or the remote control unit) is effective.	<ul style="list-style-type: none"> <li>Press STANDBY to set the player to the standby mode and then back to ON. Alternatively, press STANDBY to set the player to the standby mode, disconnect the power plug and then re-connect it. (The player may not be operating properly due to lightning, static electricity or some other external factor.)</li> </ul>

Symptom (DVD)	Remedy
Audio soundtrack and/or subtitle language does not appear in the disc initial settings.	<ul style="list-style-type: none"> <li>If the audio soundtrack and/or subtitle language does not exist on the language selected at the initial settings will not be seen/heard.</li> </ul>
No subtitles.	<ul style="list-style-type: none"> <li>Subtitles appear only with discs which contain them.</li> <li>Subtitles are cleared from the TV monitor.</li> </ul>
Alternative audio soundtrack (or subtitle) language fail to be selected.	<ul style="list-style-type: none"> <li>An alternative language is not selected with discs which do not contain more than one language.</li> </ul>
Angle cannot be changed.	<ul style="list-style-type: none"> <li>This function is dependent on software availability. Even if a disc has a number of angles recorded, these angles may be recorded for specific scenes only.</li> </ul>

Symptom (Video CD)	Remedy
No menu play.	<ul style="list-style-type: none"> <li>This function works only for Video CDs with playback control.</li> </ul>



## Technical Data

Power Requirements: AC 120V ~ 60Hz

Power Consumption: 15W

Signal System: NTSC

Operating Temperature Range: +5 to +35°C

Operating Humidity Range: 5 to 90% (no condensation)

Discs Played:

- DVD-VIDEO Disc: 12 cm single-sided, single-layer / 12 cm single-sided, dual-layer / 12 cm double-sided, single-layer / 8 cm single-sided, single-layer / 8 cm double-sided, single-layer
- Compact Disc: 12 cm disc / 8 cm disc

Specifications are subject to change without notice.

### Region Management Information

This DVD/CD player is designed and manufactured to respond to the Region Management Information that is recorded on a DVD disc. If the Region number described on the DVD disc does not correspond to the Region number of this DVD/CD player, this DVD/CD player cannot play this disc.

The Region number for this DVD player is .

There are the marks on some DVD disc package.

### DVD Disc

There are the marks on some DVD disc package.

### Notes:

- Only the above types of discs can be played on this unit. DVD-ROM, CD-ROM, CDV, etc. cannot be played. Some CD-R and CD-RW discs cannot be played depending on the condition of the player and the disc.
- This unit is to be used exclusively with the NTSC or PAL colour system. SECAM system discs cannot be used with this unit.

### DVD Disc

DVD discs are divided into titles, and the titles are sub-divided into chapter.

### Music CD Disc

Music CD discs are divided into tracks.

### Notes on handling discs

- Do not expose the disc to direct sunlight, high humidity, or high temperatures for extended periods of time.
- Discs should be returned to their cases after use.
- Do not apply paper or write anything on the disc surface.
- Handle the disc by its edge. Do not touch the playing surface (glossy side). Fingerprints and dust should be carefully wiped off the playing surface of the disc with a soft cloth. Wipe in a straight motion from the centre to the outside of the disc.
- Never use chemicals such as record cleaning sprays, antistatic sprays or fluids, benzene or thinner to clean discs.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Apparatus Claims of U.S. Patent Nos. 4,631,603; 4,819,098; 4,907,093; 5,315,448; and 6,516,132 licensed for limited viewing uses only.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.